


Avant Guarde™ Sneeze Guards

Instruction & Specification Sheet

Patent Pending

SETTING UP YOUR PRODUCT

- Carefully remove all parts from packaging.
- 2. Make sure you have all parts listed:a. 1 acrylic panel
 - b. 2-4 feet (depending on model)
- Assemble product by sliding feet into the slots at the bottom of the panel.
- 4. Place sneeze guard on flat, stable surface.

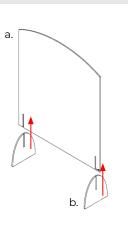




CLEANING & CARE INSTRUCTIONS

To maintain the quality of your sneeze guard, wash all parts in warm water with a mild soap. Rinse thoroughly with clean, cold water. Dry with a soft sponge or cloth to prevent water spots.

- DO NOT put any part of the unit through dishwasher or dryer machine.
- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

SPECIFICATIONS			
Item Number		Material: 0.24IN Clear Acrylic	
Without Window	With Window	Dimension(IN) W x D x H	Replacement Foot
AG001	AG002	24x4.7x15.5	
AG003	AG004	36x4.7x15.5	AGF001
AG005	AG006	48x4.7x15.5	
AG007	AG008	24x8x28	
AG009	AG010	36x8x28	AGF002
AG011	AG012	48x8x28	
	AG013*	48x10x28	
AG014	AG015	24x10x40	
AG016	AG017	36x10x40	AGF003
AG018	AG019	48x10x40	
	AG020*	48x10x40	

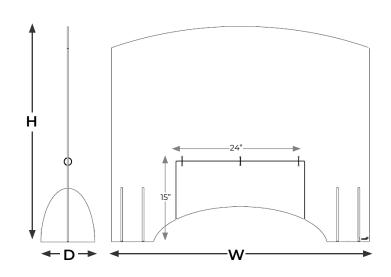

^{*}Item has pass through door in addition to window. (Door Dimension: 24" w x 15" h)

R2 05132020

Website: www.rosseto.com